



# INSTA-CLAMP™



## Installation Procedure

Please clean pipe and solder joint area thoroughly before installing the Insta-Clamp™

(Fully lubricating gasket with soapy water will assist in reducing friction to help evenly distribute the clamp on the pipe during installation.)

(New Xylan coated nut prevents seizing on 3.00" and 4.00" Insta-Clamp Plus™ models)



Leak at solder joint in copper pipe




Loosen the bolt and separate the two parts of the clamp. Snap top half of clamp with rubber directly over leak



With arrows facing solder joint, slide over until flush with coupling



Spread open bottom section of clamp with nut facing out and slide on bottom half of clamp over top rubber section with arrows visible in the opening of bottom section.

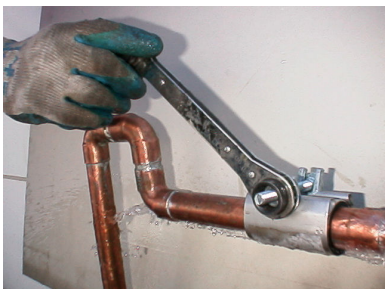

Tighten bolt



Retighten after 20 minutes...Leak is stopped!



Distributed By:

**PipeMan Products, Inc.**

**TF: (877) PIPEMAN (747-3626)**